

12 SLAT PARK CHAIR

ASSEMBLY INSTRUCTIONS

Please read instruction and identify all parts before assembly. The three narrow slats are for the curved sections, two on the front edge and one on the top edge. Make sure that you have a flat surface to assemble the seat. The slats are fitted with the counter sunk holes upper most and the bolts are inserted from the top with the nuts under/behind the seat.

IMPORTANT: Due to heavy weight of cast iron back, 2 persons are required for assembly.

Do not tighten all parts before assembly is complete.

PART LIST

PART	DESCRIPTION	Q 'TY
A	Cast Iron Ends	2
B	Standard Slat	9
C	Narrow Slat	3
D	HEX Head Bolt	26
E	Nuts	26
F	Side Brackets	2
G	Wood Screws	2

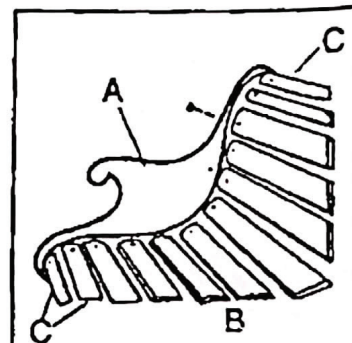


FIGURE 1

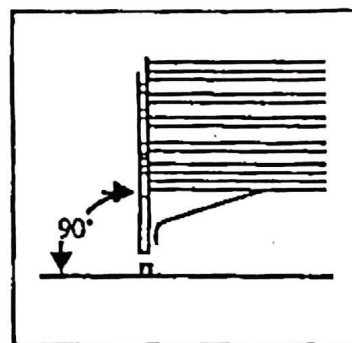


FIGURE 2

1. Assemble slats(B & C)to the cast iron ends(A)using the bolts(D) with nuts(E). Do not fully tighten the bolts at this stage. Ensure that two of the narrow slats are at the front edge of the seat and the other is at the top of the backrest. Refer to Fig. 1

2. Check that the cast iron ends are at 90° to the floor, square to the slats. Tighten all bolts and nuts including those in Step 1. Refer to Fig. 2

3. Turn the seat over. Attach the two side brackets(F)to the cast iron ends(A)using bolts (D), nuts(E), and wood screws(G) Refer to Fig.3 Fig. 4

4. Check that the ends are square to the slats and fit the two wood screws to fasten the side brackets(F)to the wood slat.

5. Tighten all parts. **DO NOT OVER TIGHTEN** and turn the seat to upright position.

Note: Due to the nature of hardwood, it may be difficult to insert the Wood Screw(G)completely. An electric screwdriver is recommended.

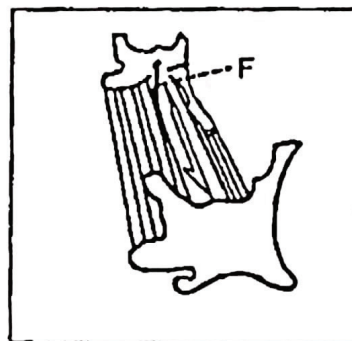


FIGURE 3

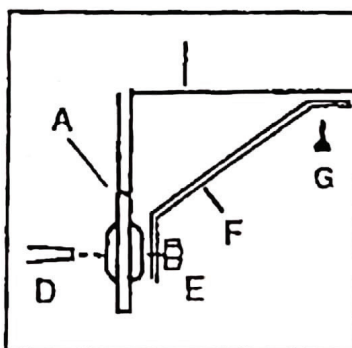


FIGURE 4

